 




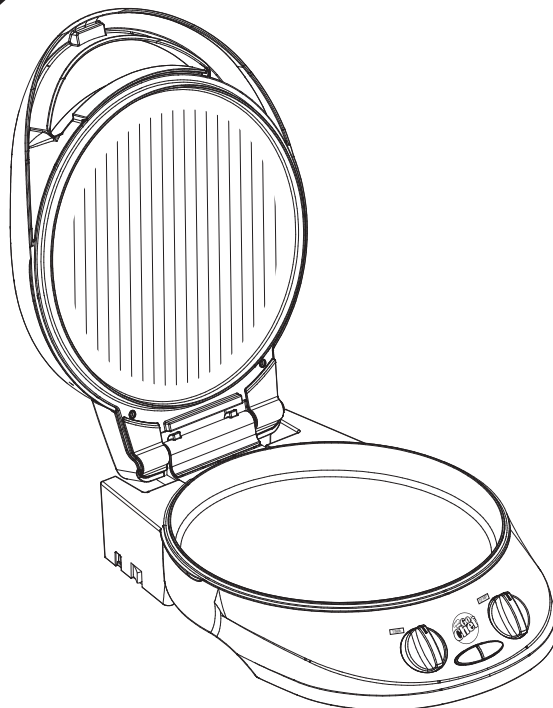

Thank you for purchasing the GoChef™ 6-in-1 Combination Grill and Pizza Oven. To get the best, tastiest results from this appliance, please read these instructions in full and keep them safe for future reference.



Contents

Safety Warnings & Advice _____	2	Guarantee _____	6
Your GoChef™ Grill & Press _____	4	Technical Information _____	6
Using GoChef™ Grill & Press _____	5	Technical specifications _____	6
Before use _____	5	Fuse & mains plug replacement _____	7
Lifting & adjusting the Lid/Griddle Pan _____	5	Disposal and the environment _____	7
Closing the Lid/Griddle Pan _____	5		
Switching On _____	5		
Cleaning & Care _____	6		



Safety Warnings & Advice

This appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or a lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of this appliance by a person responsible for their safety.

Only use the Grill & Pizza Oven for its intended purpose as described in this manual. Do not use attachments that are not specifically recommended to be used with this Grill & Pizza Oven.

Always use on a flat, stable, heat-resistant surface. Do not place on, or near, a gas or electric burner, or inside or on top of a heated oven or other heat source.

ALWAYS open the Lid/Griddle Pan by holding the handle only. **DO NOT** lift by any other means when hot.

Cooking surfaces will get extremely hot during use.

Never touch the cooking surfaces during use.

Intended for indoor household use only. Not intended for industrial or commercial use.

Do not leave unattended when in use. The Grill & Pizza Oven should not be operated by an external timer or separate remote-control system.

Children should be closely supervised while the Grill & Pizza Oven is in use.

Do not allow the power cord to hang over the edge of a countertop or the sink, or to come close to any heated surfaces.



Safety Warnings & Advice

Use in a well-ventilated area. Keep at least 4-6 inches of space all around the Grill & Pizza Oven to allow air to circulate.

Always allow sufficient room on the work surface for the Lid (Griddle) to be laid flat should you need to use it in that position.

Do not use near curtains, wall coverings, clothing, dish towels or other flammable materials.

Do not move while in use. Always allow to thoroughly cool before handling.

Do not use near a sink or in any other area where the non-cooking parts are likely to come into contact with liquids.

Do not place or drop into water or other liquids. If the Grill & Pizza Oven falls into water, immediately unplug it from the electrical outlet before attempting to retrieve it.

Do not allow the power cord to come into contact with the cooking surfaces during use.

Do not plug or unplug from the mains if your hands are wet.





Do not attempt to repair the Grill & Pizza Oven, its power cord, or plug if they become damaged. Repairs must only be made by a qualified service engineer.

Children should not play with the appliance.

Cleaning and maintenance should not be carried out by children without supervision.

Keep the product, and its cord, out of reach of children under 8 years of age.

Your GoChef™ Combi Grill & Pizza Oven

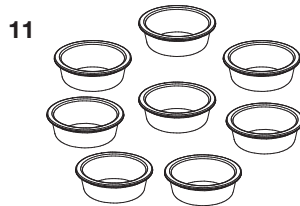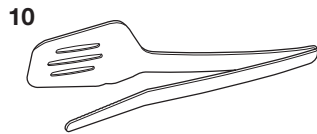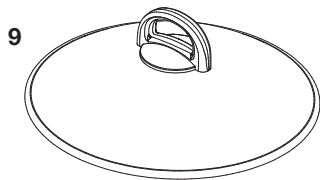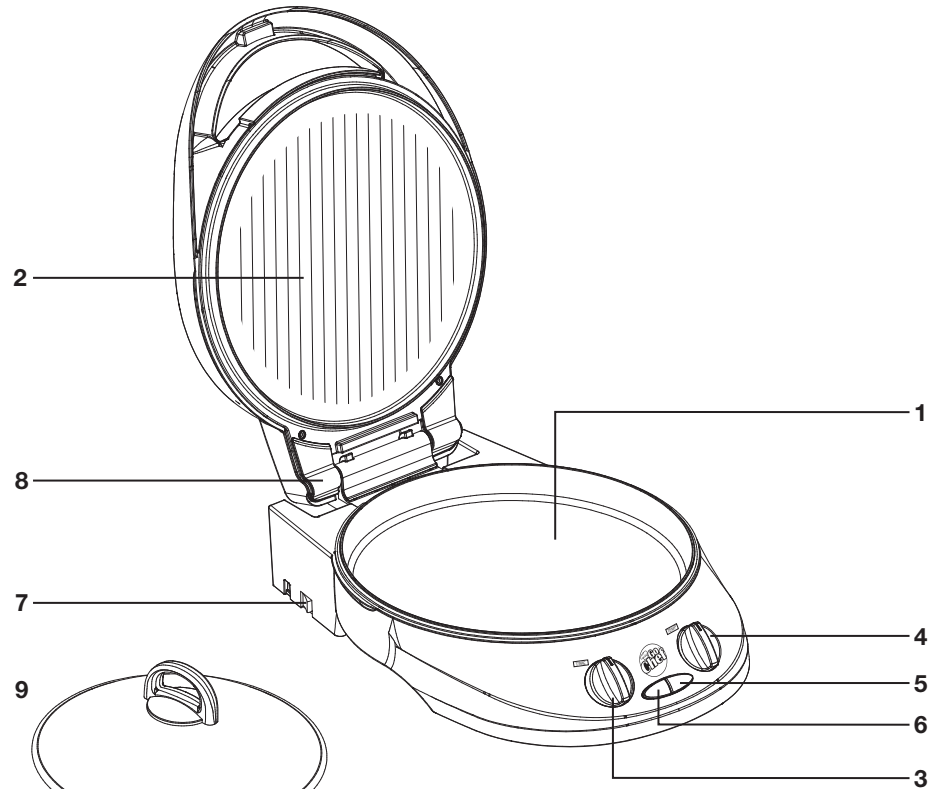

1. Main base unit with Flat Pan
2. Lid / Griddle Pan
3. Temperature Dial
4. Timer Dial
5. Temperature Indicator Light
(green -goes off when desired heat is reached)
6. Power Indicator Light (red)
7. Pan Selection Switch
(single or double - single is Flat Pan only)
8. Locking Hinge
9. Glass Ventilation Lid
10. Spatula Tong

Optional items sold separately:

11. Cake Moulds/Ramekins
12. Removable Pan Liner

Using Your GoChef™ Combi Grill & Pizza Oven



Before first use

Remove all packing materials, foam, plastic and cable ties. Open the Lid/Griddle Pan until it is vertical and cannot be opened any further, then lift it so that the Locking Hinge releases it and it can be laid flat. Then wipe both cooking surfaces with a warm, wet cloth to remove any residual traces of packing materials.

NOTE: The Glass Ventilation Lid is supplied with the handle fitted to inside for ease of packaging, please remove central screw and refit handle to outer surface before use.

Lifting and adjusting the Lid/Griddle Pan

To use the Lid/Griddle Pan as a flat cooking surface, you can open it until it is vertical and cannot be opened any further, and then lift it slightly within the casing of the Locking Hinge (Fig A). This will unlock the hinge and the Lid/Griddle Pan can be laid flat, resting on the work surface with the handle as a support (Fig B).

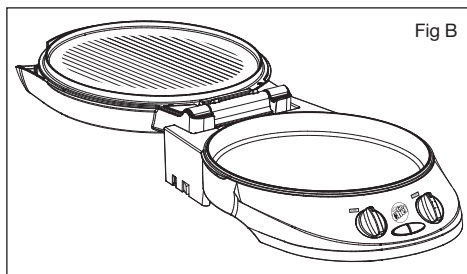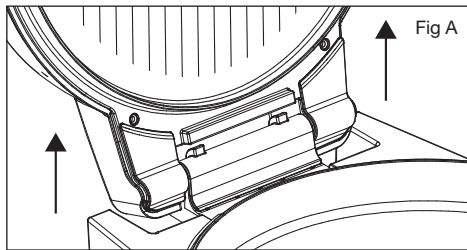

Closing the Lid/Griddle Pan


To fold the Lid down flat, reverse the process as described above. The Locking Hinge should automatically allow it to drop and just close completely in one smooth movement.

NOTE: Maintain support of the Lid/Griddle Pan until it is fully closed, allowing it to fall or slam shut could damage it.

Switching on

Plug the Grill & Pizza Oven into the mains and switch on the socket. To turn on, select either one or two cooking surfaces using the red Pan Selection Switch at the side, near the base (selecting the single option will only heat the Flat Pan). Then choose a temperature you wish to cook at using the Temperature Dial. Once you have selected the right temperature, turn the Timer Dial to the desired cooking time, this will start the Grill & Pizza Oven heating up.

You may notice that some residual odour may remain from the manufacturing process but this will naturally dissipate after first use when the plates have fully heated*.

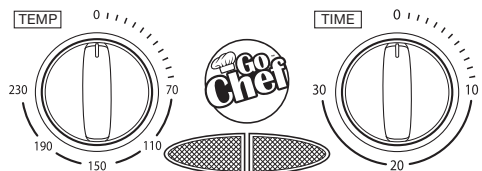

*The Timer Dial operates as a power on function and so the Grill & Pizza Oven will not heat up if the timer is not in operation.

NOTE: You will see both indicator lights come on at first, once the desired temperature has been reached, the Temperature Indicator Light (green) will go off.

Using Your GoChef™ Combi Grill & Pizza Oven

NOTE: For safety reasons, you cannot operate the Grill & Pizza Oven without the timer being set. If you wish to cook beyond the maximum time setting (30 mins) just add whatever additional time you need using the Timer Dial once the original 30 mins has expired.

DO NOT turn the dials anticlockwise beyond their starting positions as this will break the dials.

NOTE: Only use plastic or wooden utensils, like the Spatula Tongs provided, to flip or move food inside the Grill & Pizza Oven. Metal utensils may scratch and damage the non-stick surface.

NOTE: ALWAYS allow to cool before storing. Oven can be stored vertically to save space.

Cleaning & Care

Unplug and wait for the Grill & Pizza Oven to cool completely before cleaning.

Use a kitchen towel to wipe any oil, grease or residue from the cooking surfaces.

Only use clean, warm, soapy water. Do not use any harsh detergents or scourers to clean

the cooking surfaces, as these may damage the non-stick surface. Allow to dry fully before using again.

Wipe the main body of the Grill & Pizza Oven with a damp cloth.

Guarantee

This product is unconditionally guaranteed for one year against all defects of workmanship and materials. This guarantee does not affect your

statutory rights. If you have any problems or queries about this product please contact JML customer services.

Technical Information

Technical Specifications	
Model	AN-3215
Power consumption	1800W
Power supply	AC 220-240V ~ 50/60Hz

Technical Information

Fuse & mains plug replacement (UK & Ireland only)

This appliance is fitted with a BS 1363 13-amp plug. If you have to replace the fuse, only use those that are AS TA or BSI approved to BS 1362 and have a rated current of 13 amps.

Should you need to replace the plug; the wires in the power cord are coloured in the following way:

Blue – Neutral
Brown – Live
Green & Yellow – Earth


As the colours of the wires in the power cord may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire that is coloured green & yellow must be connected to the terminal in the plug that is marked with the letter E or by the earth symbol \perp .

The wire that is coloured blue must be connected to the terminal that is marked with the letter N.

The wire that is coloured brown must be connected to the terminal that is marked with the letter L.

If the power lead is damaged, it must be replaced by a qualified electrician.

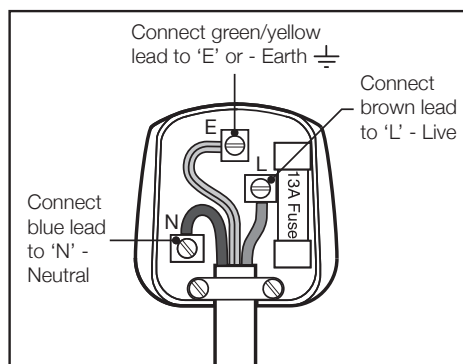

Disposal and the environment



This product is covered by the waste electrical and electronic equipment (WEEE) regulations. It should not be discarded with normal household waste, but taken to your local collection centre for recycling. For further information, please contact your local authority or approved disposal agency.



Distributed by JML

JML, Unit 1 Eastside, Port of Tyne, South Shields, NE33 5SP
Customer Services: UK: 0800 781 7831 (Freephone) • ROI: 041-978 0003 (Local rate)
Email: info@JMLgroup.co.uk • Web: www.JMLdirect.com

©JohnMillsLtd/LW/04.16/YA/A • Product code: V08120 • Made in China

